
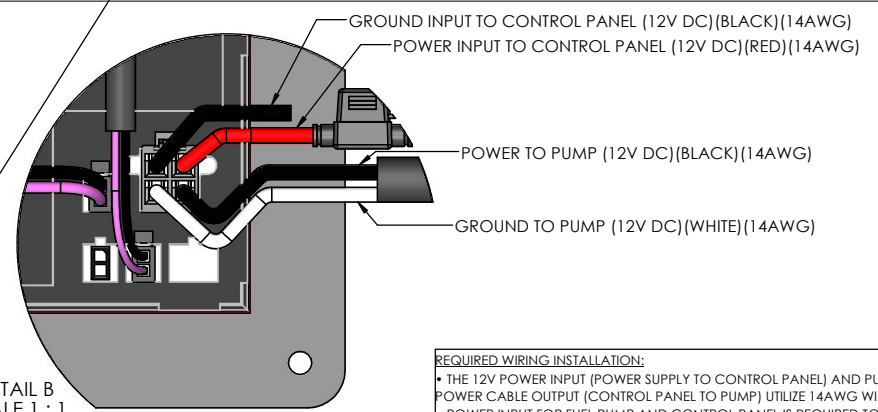
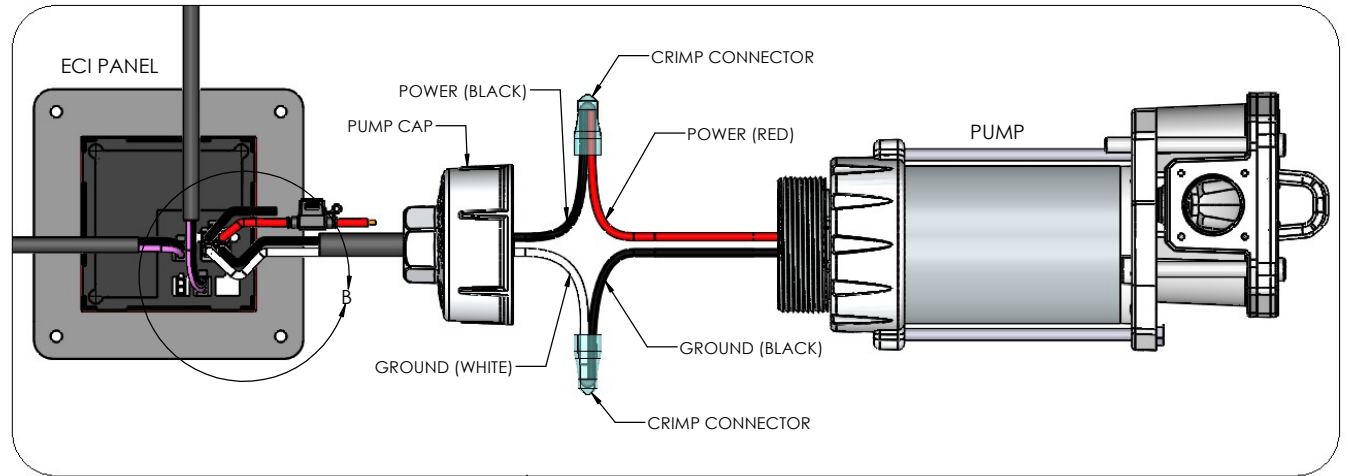


2686-02

- TWO (2) FUEL TANKS
- FUEL LEVEL READING ON ECI PANEL (PUMP)
- FUEL LEVEL READING ON ECI PANEL (GEN)

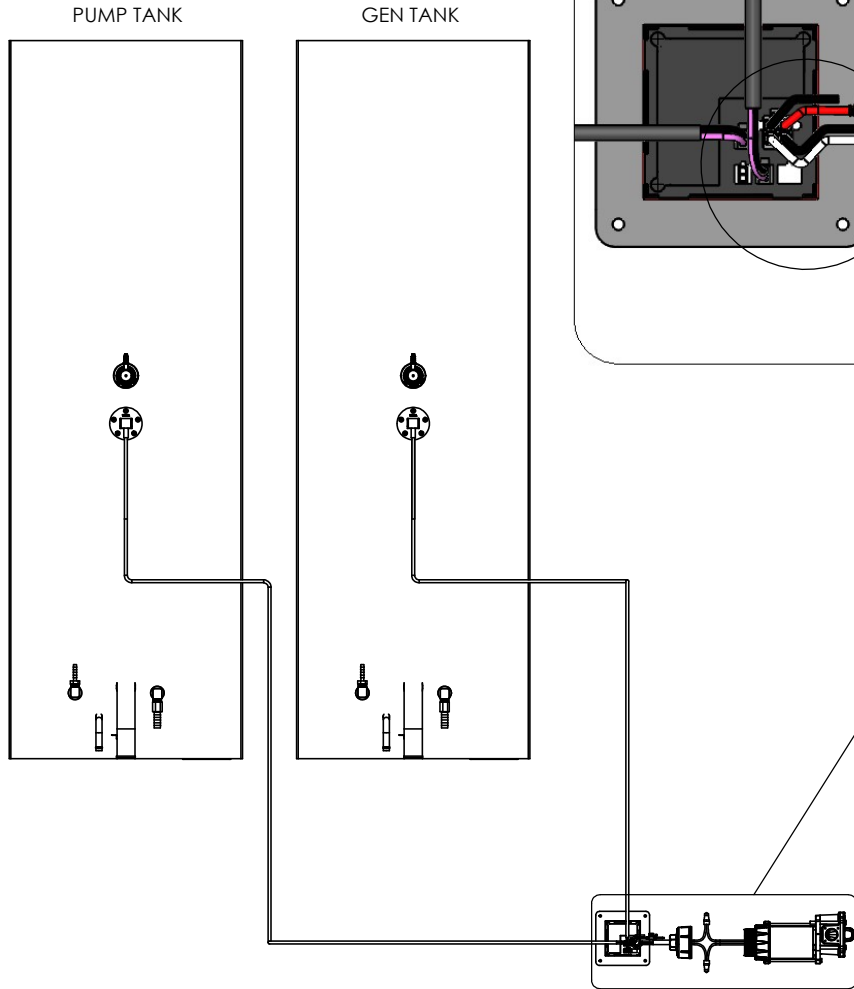

- REQUIRED WIRING INSTALLATION:**
- THE 12V POWER INPUT (POWER SUPPLY TO CONTROL PANEL) AND PUMP POWER CABLE OUTPUT (CONTROL PANEL TO PUMP) UTILIZE 14AWG WIRE
  - POWER INPUT FOR FUEL PUMP AND CONTROL PANEL IS REQUIRED TO BE ON A DEDICATED CIRCUIT
  - DEDICATED CIRCUIT MUST BE PROTECTED WITH 15AMP FUSE FOLLOWING THE GUIDELINES FROM ANSI/RVIA STANDARD FOR LOW VOLTAGE SYSTEMS IN CONVERSION AND RECREATIONAL VEHICLES
  - FUSE RECOMMENDATION IS ATC-15 (BLUE)

UNLESS OTHERWISE SPECIFIED ALL DIMENSIONS ARE IN INCHES		MATERIAL		DESCRIPTION	
THIS DRAWING IS SOLE PROPERTY OF ECI FUEL SYSTEMS. ANY MISUSE OR REPRODUCTION OF THE DRAWING WITHOUT CONSENT IS STRICTLY PROHIBITED.		CARB/EPA Compliant Dual System Controller (E)		PART NO. REV	
TOLERANCES ARE AS INDICATED		0.45 LBS		2686-02-FS	
DECIMALS .XX .04		NAME	INI	DATE	
HOLE Ø .XX .06		DRAWN BY	DB	10/23/2023	
ANGLES ±1°		DRAWING APV	DH		DRAWING NO. SIZE
FRACTION ±1/16		MFG APV			B
		APV			SHEET SCALE: 1:10 SHEET:






# DUAL SYSTEM W/ FLAT BRACKET WIRE SECUREMENT

## INSTALLATION INSTRUCTIONS:

\*IF THERE IS NO FUSE HOLDER ON THE PUMP WIRE, USE THE WIRE ADAPTOR W/ FUSE HOLDER FOR THIS INSTALLATION

1. ENSURE CONNECTORS ARE PLUGGED INTO THEIR PROPER LOCATION (SEE PG. 1)
2. MAKE SURE THAT THERE ISN'T ANY TENSION ON THE WIRES/CONNECTORS LEADING INTO THE CONTROL PANEL

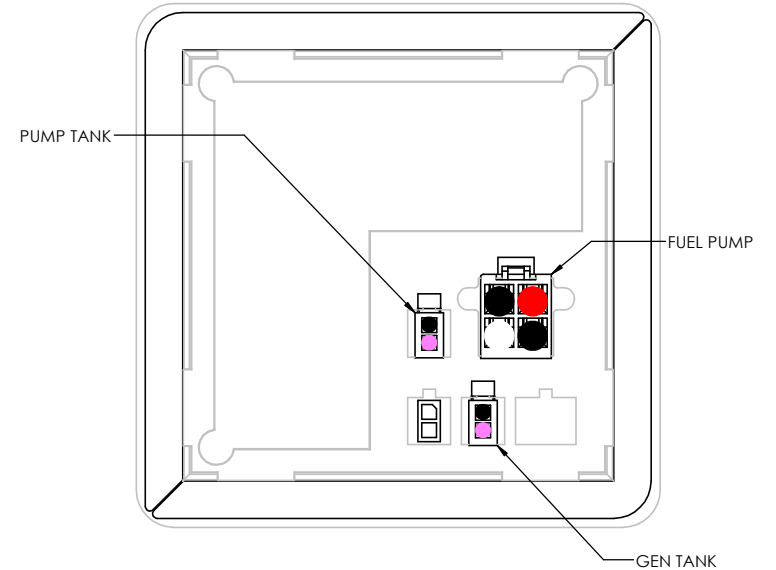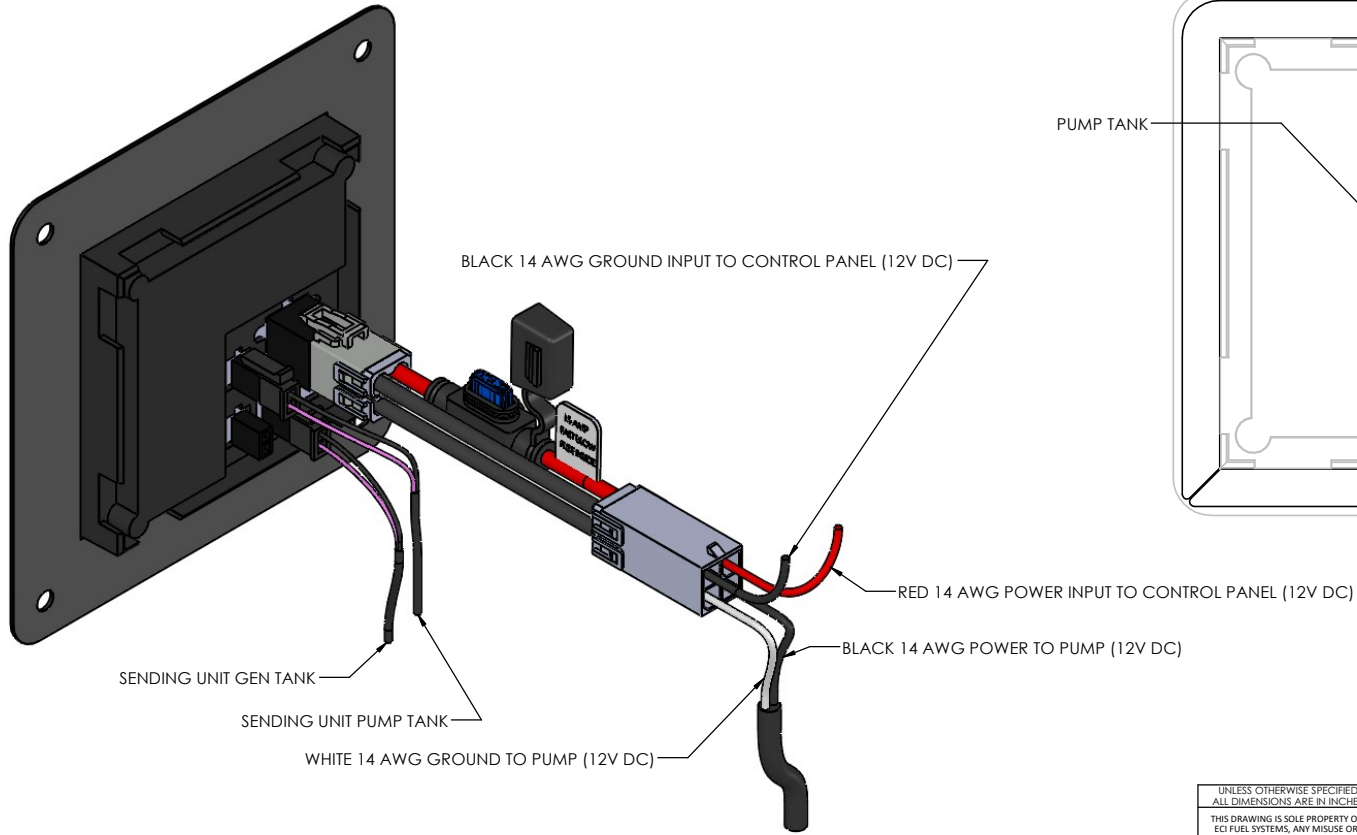



UNLESS OTHERWISE SPECIFIED ALL DIMENSIONS ARE IN INCHES	MATERIAL		DESCRIPTION	
	THIS DRAWING IS SOLE PROPERTY OF ECI FUEL SYSTEMS. ANY MISUSE OR REPRODUCTION OF THE DRAWING WITHOUT CONSENT IS STRICTLY PROHIBITED.		CARB/EPA Compliant Dual System Controller (E)	
WEIGHT		PART NO	REV	
0.45 LBS		2686-02-FS		
TOLERANCES ARE AS INDICATED		NAME	INI	DATE
DECIMALS .XX .04		DRAWN BY	DB	10/23/2023
HOLE Ø .XX .06		DRAWING APV	DH	DRAWING NO
ANGLES ±1°		MFG APV		SIZE
FRACTION ±1/16		APV		B
		SHEET SCALE: 1.25:1		SHEET:

# DUAL SYSTEM W/ FLAT BRACKET WIRE SECUREMENT

**INSTALLATION INSTRUCTIONS:**

\*IF THERE IS A FUSE HOLDER ON THE PUMP WIRE, USE THIS INSTALLATION. WIRE ADAPTOR NOT NEEDED

1. ENSURE CONNECTORS ARE PLUGGED INTO THEIR PROPER LOCATION
2. MAKE SURE THAT THERE ISN'T ANY TENSION ON THE WIRES/CONNECTORS LEADING INTO THE CONTROL PANEL

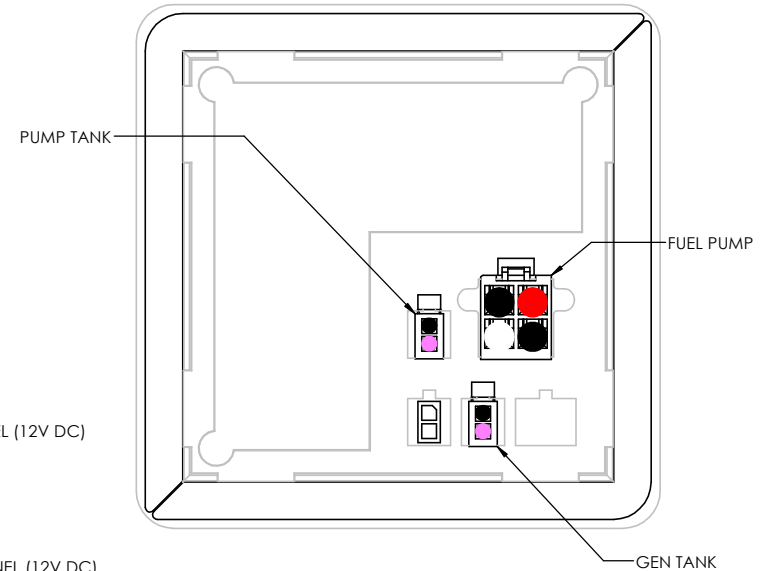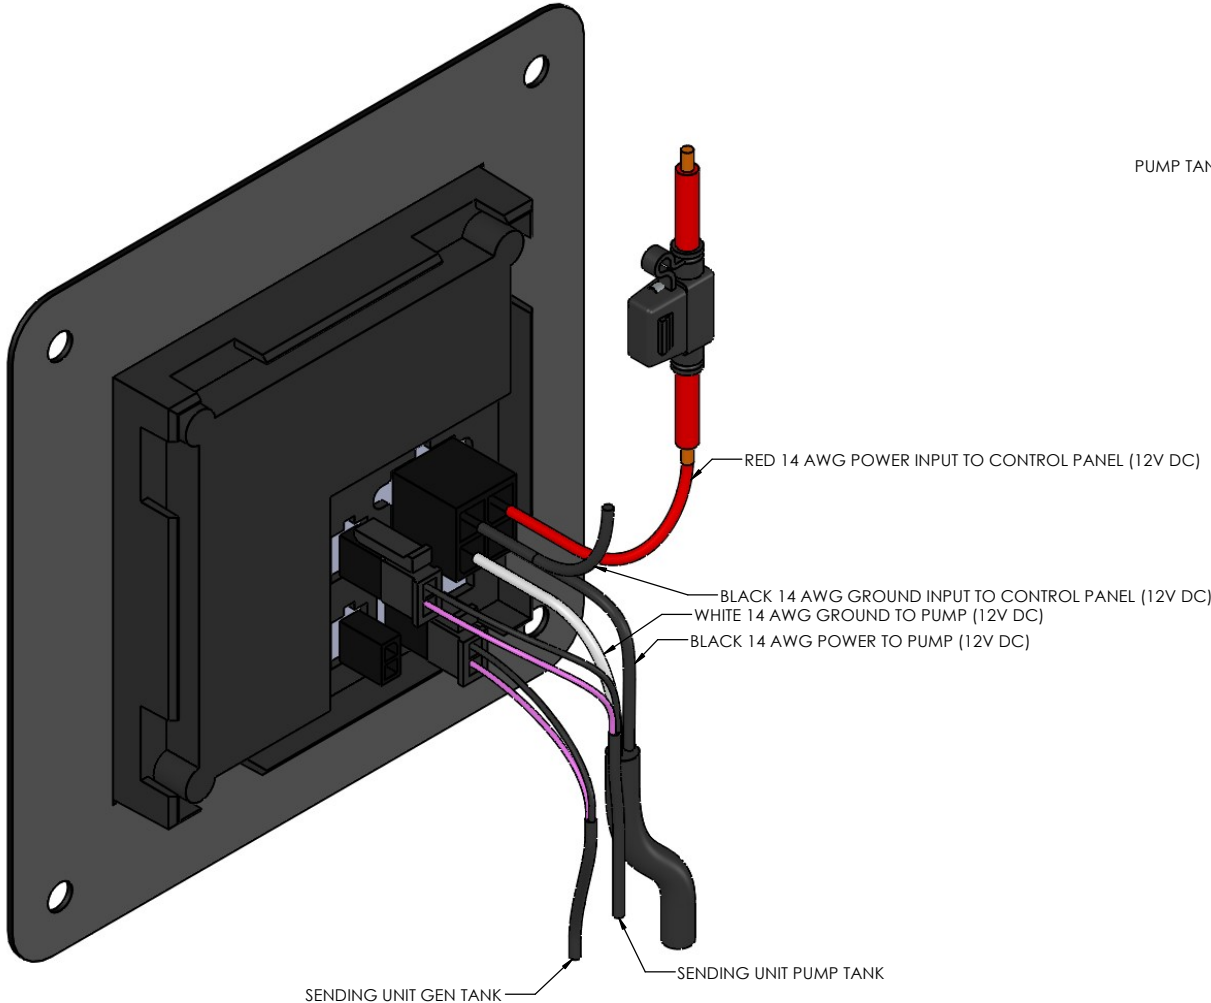

UNLESS OTHERWISE SPECIFIED ALL DIMENSIONS ARE IN INCHES	MATERIAL		DESCRIPTION	
	THIS DRAWING IS SOLE PROPERTY OF ECI FUEL SYSTEMS. ANY MISUSE OR REPRODUCTION OF THE DRAWING WITHOUT CONSENT IS STRICTLY PROHIBITED.		CARB/EPA Compliant Dual System Controller (E)	
TOLERANCES ARE AS INDICATED	WEIGHT		PART NO	REV
	0.45 LBS		2686-02-FS	
DECIMALS .XX .06 HOLE Ø .XXX .005 .XX .06 .XXX .005	NAME	INI	DATE	
ANGLES ±1° FRACTION #1/16	DRAWN BY	DB	10/23/2023	
	DRAWING APV	DH	DRAWING NO	SIZE
	MFG APV			
	APV			



SHEET SCALE: 1.25:1 SHEET: